




WARDROBES R US
CABINET CRAFT

Assembly Instructions

Please read instructions carefully before assembly, as this will save time and prevent damage. Tools required:

- Drill Gun
- Pozi drive bit
- 3-5mm drill bit
- Phillips screwdriver

After determining which wardrobe pack you have purchased, the top and the cleat can be cut down to a smaller size e.g. you may have purchased a 2100 and your wardrobe gap is 2000 long, you only need to cut own one side of each (must be the same side) to the correct length (see right).

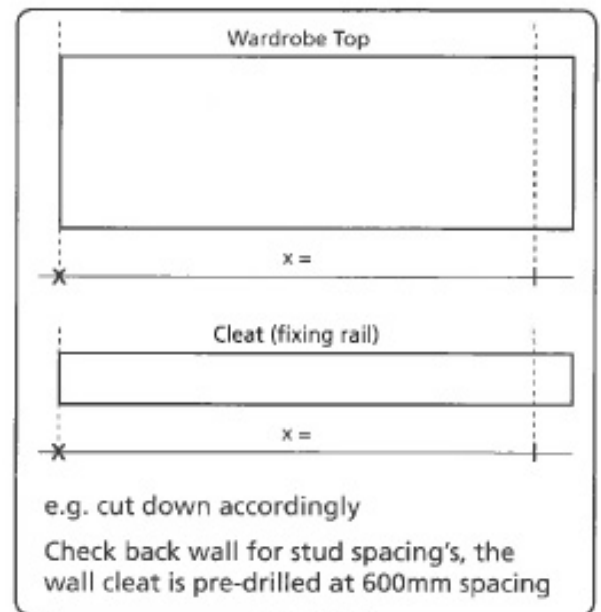

Step 1: Measure along back wall at a height of 2100mm from the floor, do this at each end and in the middle.



Step 2: Screw suspension bracket screws into the wall cleat, ensuring the top of the cleat sits at your 2100mm wall markings





Step 3: Hold wall cleat in position at the 2100mm height that has been marked on the back wall and pre-drill, and then screw 2 1/2" screws to fasten the cleat to the wall



Step 4: Screw in saddles for rails, if applicable to your design



Step 5 Screw the shelf dowels into place



Step 6: Hang uprights in desired position





Step 7: Clip in the shelves. The shelves pull the sides together and tighten as they lock into place. Fit wardrobe rail brackets into position and then wardrobe rails.



Step 8: Place rails into position



Step 9: Place top into position and screw into uprights.



Step 9 continued:





Step 10: (if you are adding drawers)
Locate the carcass drawer runners and screw onto the wardrobe ends at the desired drawer height, the wheel goes at the front (use euro screws)



Step 10 continued:



Step 11: Insert your pre-assembled drawers into the newly installed runners



Step 11 continued:



Congratulations! You have completed your self-install.