

Mega Storage Unit – Assembly Kit

H: 1950mm W: 1200mm D: 600mm



Checklist

Qty per unit

1 ¾ Screws	70	☐
White Cover Caps	40	☐
White Brackets & Covers	4	☐
6 5/8 screws	8	☐
1 1/8 screws	8	☐
Hinge Mounts	6	☐
Hinges	6	☐
Easy Fold Arm	2	☐
Shelf Studs	20	☐
128mm Slim Bow Handles	2	☐
Shelf Bolt	2	☐

Parts already assembled

Fixed Pin Butt Hinge on Ezyfold door	6
6 5/8 for Butt Hinge	36
Ray Fix	2

Packed by: _____

Date: ____/____/____



MEGA GARAGE UNIT (MMEGA) ASSEMBLY

INSTRUCTIONS

H: 1950 x W: 1200 x D: 600



Please read instructions carefully before assembly as this will save time and prevent damage.

Note that all holes are pre-drilled for easy assembly

TOOL REQUIRED

Drill, 2mm drill piece, Philips screwdriver, hammer

ITEMS NOT SUPPLIED

PVA glue, staples/nails to attach the back

CONTENTS OF PACKAGE

- 1x Back
- 2x Sides
- 1x Bottom
- 1x Top
- 1x Lower central divider
- 2x Small Adjustable Shelves
- 2x Medium Adjustable Shelves
- 1x Shelf (middle shelf fixed)
- 2x Ezyfold Doors
- 1x Toe Kick
- 6x Hinges & Mounts
- 2x 128mm Slimbow handles



BACK

- First start by having the back laid down flat on whatever surface you will be working on.
- Place pegs into the bottom of the unit for the toe kick later.

SHELVES

- Once the back is laid flat, place some glue and the supplied wooden pegs into each hole.
- Once each peg has been inserted in a hole, connect the bottom to the back and screw in place
- When the bottom has been screwed in place attach the central divider to the bottom shelf, then attach the Fixed shelf to the top of the central divider.
(See photo for example)
- Once all three shelves are in place screw them into the back of the unit until they are secure.



LEFT HAND SIDE

- Place side on a flat surface
- Place glue and the wooden pegs into each shelf hole (x6 on each side)
- Then place hinges in & screw into place (x3 each side)
- Attach the left hand side to the central divider and bottom.

TOP

- Take the top of the unit and fill the holes with glue and wooden pegs like the previous steps.
- Then attach it to the back and left side of the unit.

RIGHT HAND SIDE

- Place side on a flat surface
- Place glue and the wooden pegs into each shelf hole (x6 on each side)
- Then place hinges in & screw into place (x3 each side)
- Attach the right hand side to the top and bottom of the unit.



TOEKICK

- Turn cabinet onto its front (or stand upright if you are using a table) so you're able to see where to screw in the toe kick
- Use the screws provided and screw the toe kick into place under the bottom so there is no gap in the bottom of the unit.
- Place white caps in each open hole and put in place with a hammer




DOORS

- Place the hinge base plates, down the side and screw them into the pre-drilled holes.
- Then place both doors flat on the floor and place the hinges into the pre-drilled holes, then hit them in using a hammer until they are flat on the doors.
- Once hinges have been installed, take the two lots of bi-fold doors and lay them on a flat surface
- Take the bi-fold rail attachment and screw it in the adjacent hole, drilled in the middle of the door
- Once the rail is attached to the door, lift-up one door at a time and attach the rail to the inside of the unit using the pre-drilled holes, underneath the centre shelf
- Repeat on both sides so they both doors open smoothly.





HINGE ADJUSTMENT

- To adjust the depth of your hinges please follow instructions.

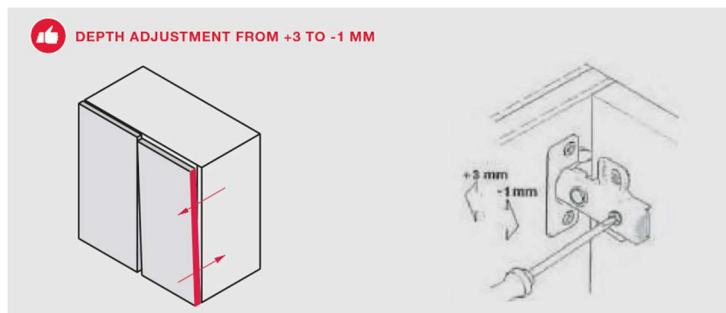

- To adjust the height of your hinge please follow instructions.

HEIGHT ADJUSTMENT ± 2 MM

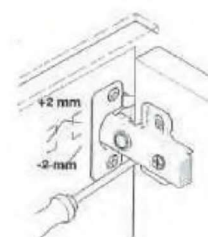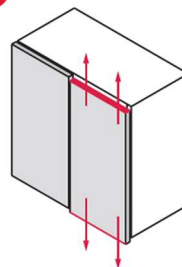

- To make a lateral adjustment to your hinge please follow the set instructions.

