



STORAGE UNIT (MS) INSTALL INSTRUCTIONS

H: 1950 x W: 400-1000 x D: 420

Please read instructions carefully before assembly as this will save time and prevent damage.

TOOL REQUIRED (Drill, 2mm drill piece, Square Surefix screwdriver, hammer)

ITEMS NOT SUPPLIED PVA glue, staples/nails to attach the back

CONTENTS OF PACKAGE

- 1 Back 4mm
- 2 Sides
- 4 Shelves
- 1 Toe kick
- 6 Hafele Soft close Hinges (2 parts)
- 2 128mm Slim bow handles
- Shelf Studs, screws, feet sliders and white caps



All sides are predrilled for easy assembly

SIDES

- Place sides on a flat surface
- Place glue into shelf holes (x6 on each side)
- Place pegs in (x6 on each side)
- Place hinges in & screw into place (x3 each side)



SHELVES


- Glue end of shelves on edges (x3)
- Attach glued side of shelf to sides
- Place glue on top of shelf edge
- Attach side to top of unit
- Turn cabinet onto its front
- Screw toe kick into place (3 screws)
- Predrill holes for screws for shelves
- Screw shelves into place
- Place white caps on with a hammer



STORAGE UNIT (MS) INSTALL INSTRUCTIONS CONTD.

BACK

- Place back onto unit

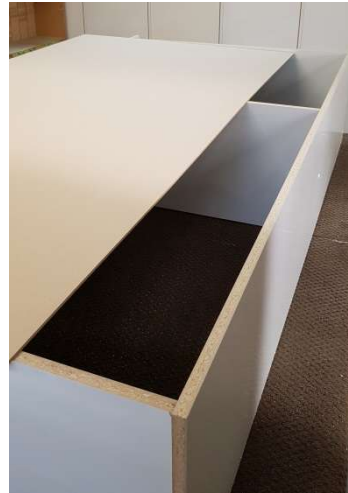

- Staple back on



- Attach sliders to bottom of unit and staple on



- On the back draw a line across the unit from top 1070mm and staple across line to fix back to shelf.

- Turn cabinet upright



SHELVES

- Insert Shelf Studs and attached shelf

DOORS

- Attach hinges to door
- Attach door to unit
- Adjust hinges to align doors

HINGE ADJUSTMENT

- See attached sheet for adjusting soft close hinges

